

Non-penetrating Roof Mount

GENERAL USAGE

- Place NPR9 mount in location where line of site has been established
- Install mast and mono poles, and place dish on mast
- Take Hydro-Mount bin to sink and fill with water to top of molded rib (see water line in Figure 1)
- Place lid on bin and hand screw lid to bin with provided specialty screws
- Once lid is fully secured, then carry bin to NPR9 mount location. (repeat steps 2-4 until all four bins are in place on mount)
- Adjust dish into line of site and peak signal strength

BEST PRACTICES

- Do not use a drill to screw on lid, only use provided specialty screws
- Do not stand or sit on Hydro-Mount bins
- Do not move bin filled with water without securing lid with all 6 screws
- Do not add any chemicals to bin other than water

Hydro-Mount®

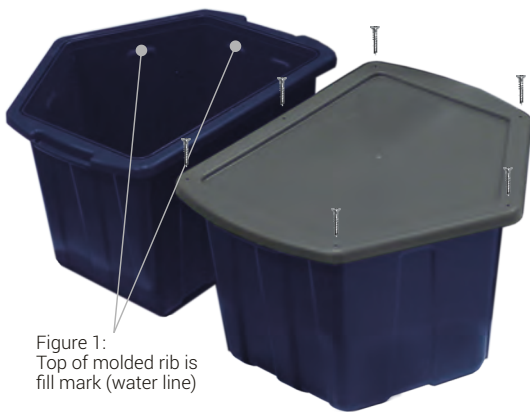


Figure 1:
Top of molded rib is
fill mark (water line)



The information contained in this image is the sole property of PerfectVision. Any reproduction in part or as a whole without the written permission of PerfectVision is prohibited.

All product, product specifications and product data are subject to change without notice to improve reliability, function, design, performance or other aspects of our products.

www.perfect-vision.com